

## Airpura Limited Warranty

5 years on parts and 10 years labor

Further Information:  
**BERRIMAN ASSOCIATES**  
1-800-480-3630  
[www.berriman.com](http://www.berriman.com)

# Airpura

AIR PURIFIERS



## Operating & Filter Replacement Directions

# V600


Thank You for choosing an  
Airpura High Efficiency Air Purifier  
To bring you the benefits of clean indoor air

### To Begin Using Your Airpura...

- Inspect the exterior of your Airpura to verify there is no damage from shipping. If any damage is noted please follow the instructions in the Airpura returns policy.
- Wipe the unit with a damp cloth to remove any dust from packaging
- Plug the unit into a regular grounded 110 volt outlet
- Turn on the unit to MAX and allow it to run for a few minutes
- Set the variable speed control to the level you wish
- The most efficient way to use your Airpura for regular air quality maintenance is to run it at a low speed 24 hours a day 7 days a week

Feel the difference breathing clean air makes  
to your health

To close the filter chamber

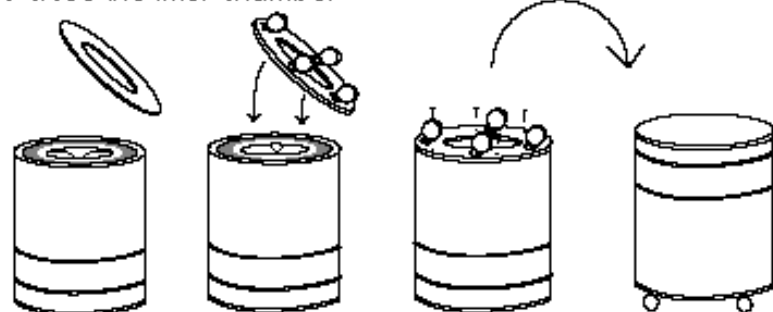

Replace the  
gasket

Position the  
indentation  
in the cover  
into the center of  
the HEPA filter

Replace the  
4 screws and  
tighten

Turn the  
Airpura  
back onto  
it's casters


# Filter Maintenance and Replacement

## The Pre-Filter

- Can be vacuumed from the exterior of the unit once a month or more often.
- Should be replaced at least after 12 months of use

### To vacuum the pre-filter

- Use the brush attachment on your vacuum cleaner
- Vacuum slowly around the mesh surface of the filter chamber

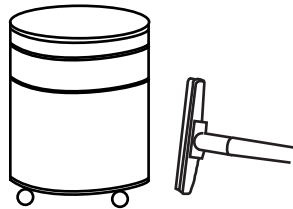


## The Activated Carbon Filter

- Should be changed as needed in heavy applications and at least every 24 months in normal use.


## The HEPA Filter

- Should be replaced at least every 3 to 5 years of normal use


### To open the filter chamber

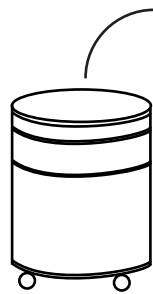


Turn over the Airpura

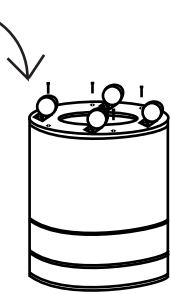


Remove the 4 retaining screws

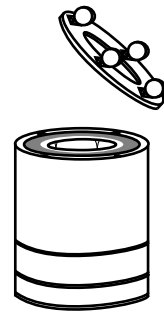


Take off the cover

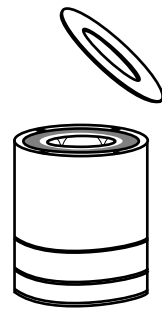

Remove the gasket

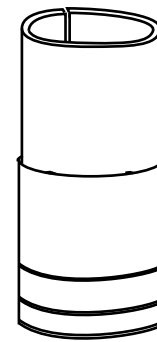


Position the pre-filter inside the filter chamber

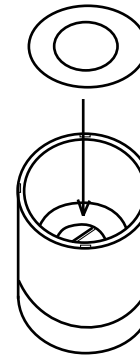


Place a felt gasket at the bottom of the filter chamber




Unfold the filter slider (Supplied with replacement filters or on request Part#6F 001)

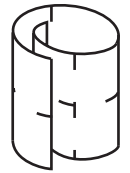

Roll it into a spiral

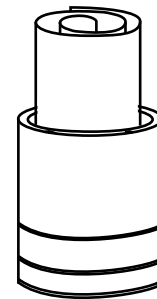


Insert the tube into the filter chamber inside the pre-filter

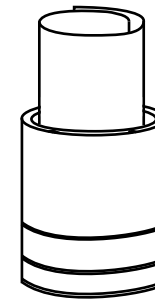


Let the spiral open to fill the opening




Open the top of the spiral to make a slight funnel

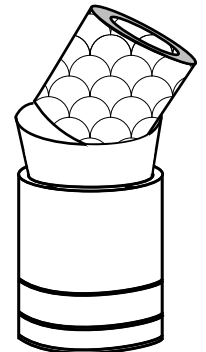


Insert the carbon canister into the funnel and hold it straight

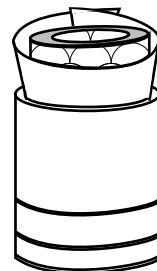


Let the canister slidown the filter slider

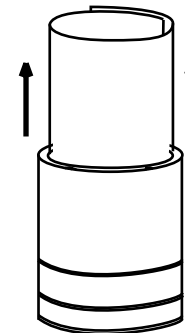

Pull the filter slider up out of the cavity using both hands and let the canister slide to the bottom of the cavity

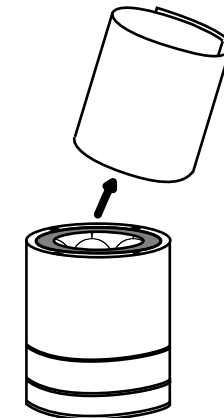

Remove the filter slider and fold it for further use

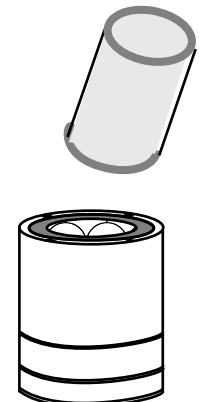

Slide in the Hepa filter

See over for closing the filter chamber